ADA NATURE AQUARIUM CHECK VALVE チェックバルブ(逆流防止弁)使用説明書



●ご使用になる前に

チェックバルブはCO₂やエアーを水槽に添加する際に、水槽内の水が逆流し て漏れたり、レギュレーターなどの器具に達して故障することを防止するた めの大切なパーツです。ご使用の際には次の点にご注意ください。

【使用方法】○チェックバルブの注入(IN)側には必ず耐圧チューブをご使用 ください。シリコンチューブを使用すると、チューブ内のガスが抜けて減圧し、 チェックバルブ内部の弁が正常に作動しなくなることがあります。○強い水圧 のかかりにくい場所に設置してください。チェックバルブの放出(OUT)側から 強い圧力がかかると、弁が正常に作動しなくなることがあります。・チェック バルブは水槽から極端に下がった位置で使用しないでください。○チェック バルブは消耗品です。定期的な点検と交換を行いましょう。樹脂でできた チェックバルブは破損しやすく、CO₂ガス漏れなどを生じることがあります。 また、弁が正常に作動していない場合、長期間気付かないと、電磁弁やレギュ レーターなどにまで水が違してしまうおそれがあります。チェックバルブの 正常動作は定期的に点検してください。※関連する製品の説明書をよくお読み になった上で、正しい使用方法にてお使いください。

【使用上の注意】●本製品は初めて使用する際や長期間使用しなかった場合 などに、内部の弁が張り付いてCO₂やエアーが吐出されないことがあります。 その場合、チェックバルブの注入(IN)側から、先の尖っていない棒などの 細くて弁を傷つけない形状の物を差し込み、張り付いた弁をはがしてご使用 ください。その際、弁を傷つけてしまうと、水が逆流してしまうので、十分に ご注意ください。●本製品はCO₂添加システムや水槽用エアーボンブの配管に 設置して水槽からの水の逆流を防ぐためのものです。この用途以外には使用 しないでください、●本製品に起因する付随的損害の補償には応じかねます。

IMPORTANT

For supplying CO2 and air into the aquarium tank, Check Valve is an important part to prevent water backflow from the tank into CO2 regulator or air pump. Please pay attention to the following instructions.

[Usage] Always use Pressure resistant tube to In-flow(IN) side of Check Valve. The internal valve of Check Valve may not work properly if using silicone tube as the gas leaks out from inside the tube and causes reduced pressure (Pressure resistant tube is not contained in Parts Set). Install it in a location where strong water pressure is not applied. When high pressure is applied to Out-flow (OUT) side of Check Valve, the valve may not work properly. Do NOT install Check Valve at a position extremely low from a tank. Check Valve is a consumable product. Regular inspection and replacement is necessary. Check Valve made from resin is easily damaged and may cause CO2 leakage. In case the valve does not work properly for a long period of time, water may reach to solenoid valve (EL Valve) or CO2 regulator. It is necessary to check the performance of Check Valve priodically.

*Please read instruction manuals of related products before use, and use this product properly.

[Precautions for use] ● When using this product for the first time or when it has not been used for a long period of time, the internal valve may stick, and CO2 or air may not be discharged. In that case, insert a thin object such as a blunt rod that does not damage the valve from the In-flow (IN) side of the Check Valve, and peel off the sticking valve before use. At that time, if you damage the valve, water will flow back, so please be careful. ● This product is installed in the piping of a CO2 injection system or an air pump for an aquarium to prevent backflow of water from the aquarium. Do not use for any other purposes. •We will not compensate for incidental damages caused by this product. *KEEP OUT OF REACH OF CHILDREN.

発売元: 株式会社 アクアデザインアつJ 新潟県新潟市西蒲区茶山8554-1 753-0054 3QUB DESIGN 3MBADO CO.LTD. 8554-1 Urushiyama, Nichikan-ku, Niigata 953-0054, Japan MADE IN JAPAN



401504S14JE21115