

ADA NATURE AQUARIUM PLAIN CABINET

プレーンキャビネット

日本語

●安全上の注意


- プレーンキャビネットは、この説明書に従って水平に設置し、水槽を載せた後も水平を確認してください。安全のため、水槽は必ず水平に設置してください。
- 水槽（キューブガーデン、キューブグラス等）は、プレーンキャビネットの上にガーデンマットを敷いてから設置することをおすすめします。ガーデンマットには振動を吸収し、水槽のずれ落ちを防ぐ効果がありますので、より安全にご使用いただけます。
- プレーンキャビネットと水槽の間に、小石や砂粒などの異物を挟まないように注意してください。異物が挟まると、水槽が割れる危険性があります。
- 水槽の転倒などを防ぐため、子どもが触らないようにご注意ください。
- プレーンキャビネットが水でぬれた場合には速やかに乾いたタオルで拭き取ってください。また、汚れを拭き取る場合は塗装が落ちる可能性があるため洗剤等は使用せず、乾拭きまたは水にぬらして固く絞ったタオルで軽く拭き取ってください。

●設置方法

- プレーンキャビネットは、必ずしっかりとした床の上に設置してください。畳やカーペットの上など、不安定な場所には設置できません。
- プレーンキャビネットを床に置いた後、天板の四隅を手で押してがたつきがないことを確認してください。
- プレーンキャビネットを設置した後と、水槽を載せた後には、必ず水準器を使って水平を確認してください。また、水槽に水を張った後も水平を確認してください。
- プレーンキャビネットを設置した際、がたつきがある場合や水平になっていない場合、床とプレーンキャビネットの間に5cm四方ほどに切った板を挟んで調節してください。薄めの板を用意し、重ねる枚数で傾きを調節します。


プレーンキャビネット仕様図

水槽台は中央の仕切りによって左右のスペースに分けられています。水槽台の左右は解放されていて、扉などはありません。

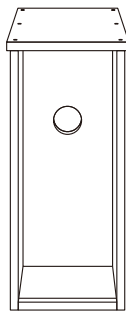

側面

中央の仕切りには配管用の穴 (Ø75mm) が設けられています。

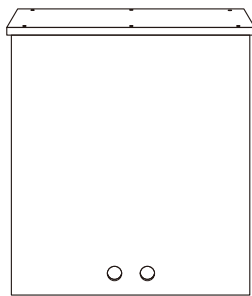

背面

背面には配線用の穴 (Ø40mm) が2つ設けられています。

English

●Safety Instruction


- Install PLAIN CABINET on a level surface by following this manual. Check the level again after placing an aquarium on it. For your safety, make sure that the aquarium is level once installed.
- Place GARDEN MAT on PLAIN CABINET before installing an aquarium tank (CUBE GARDEN, CUBE GLASS) on the cabinet. It's strongly recommended for safety reasons as the mat absorbs vibrations and prevents slippage of the tank.
- Make sure that the surface between the PLAIN CABINET and the aquarium is free of any foreign material such as sand and gravel. Leaving foreign materials between them may cause the tank to crack.
- To avoid the fall of the tank from the cabinet, please keep out of reach of children.
- Wipe off any water dropped on, or inside of the PLAIN CABINET promptly, with a dry towel. To remove dirt, use a dry or damp towel. Do not use any detergent to clean the PLAIN CABINET since it may cause the paint to come off.

●Installation method

- Be sure to place PLAIN CABINET on a flat floor surface. It cannot be installed on a carpet or a Tatami mat, even when a wood board is placed underneath.
- Make sure that PLAIN CABINET is installed flat without any tilt by pushing at four corners of the upper plate.
- Check the flatness using a level after installing the PLAIN CABINET and placing the tank. Also, check the flatness after filling the tank with water.
- If the PLAIN CABINET is tilted or not flat, adjust the flatness by inserting 5cm square wooden shim plates between the floor surface and the PLAIN CABINET. Have a number of thin shim plates available to make fine adjustments by using multiple shim plates.


Specification

The cabinet has the right and left space separated by the center partition. Both the right and left ends of the cabinet are open with no doors.

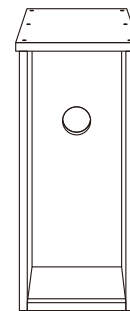

Side

There is a hole (Ø75mm) for piping on the center partition.

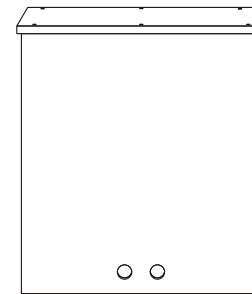

Back

There are two holes (Ø40mm) for electric cord on the rear plate.

発売元：株式会社 アヲデザインアマン
新潟県新潟市西蒲区漆山8555-4-1 〒953-0054

ADA DESIGN AMANO CO.,LTD.
8554-1 Urushiyama, Nishikan-ku, Niigata 953-0054, Japan
MADE IN JAPAN 40B551S14COPYJE26C1B

お問い合わせ先：ADAサービスセンター
0256-72-1994(平日10:30~17:30)
E-mail/support@adana.co.jp

ADA
aqua design amano